

Milly Mally

**INSTRUKCJA
OBSŁUGI**
OPERATIONAL
MANUAL



KRZESEŁKO / CHAIR MAX


WYPRODUKOWANO ZGODNIE Z NORMĄ PN-EN 14988




LISTA CZĘŚCI / PARTS LIST



A

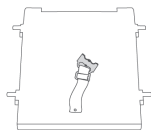

B

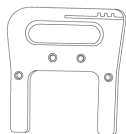

C



D



E



F



G



H




I



J




K




L




M

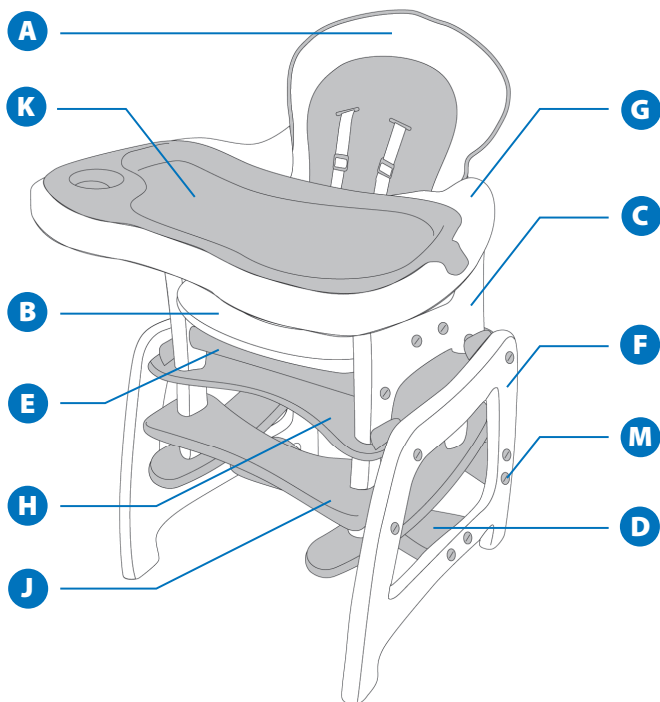


1

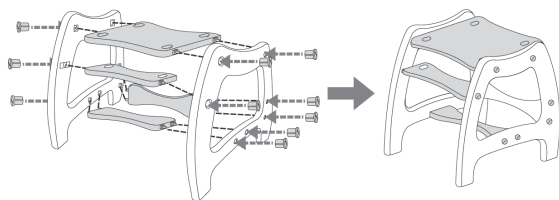


2

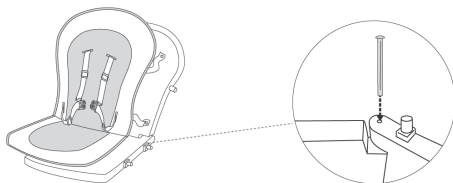


3

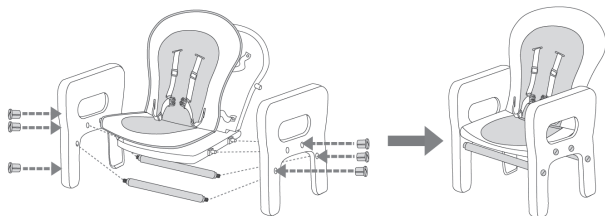


4

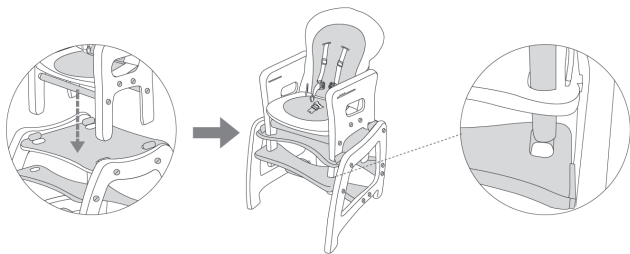


5

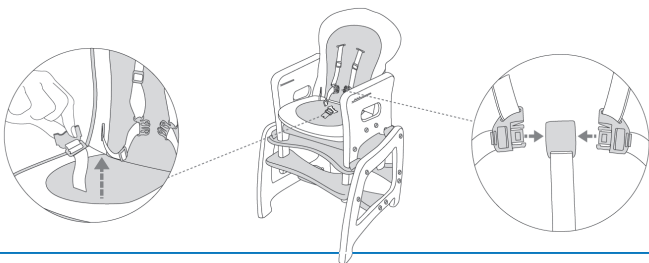


6

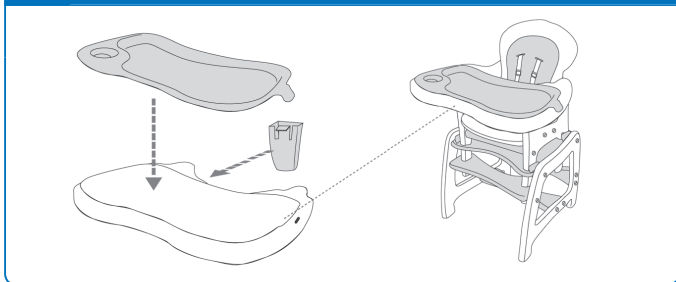


7

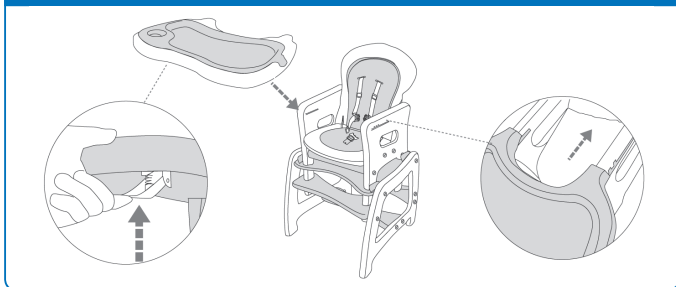

8

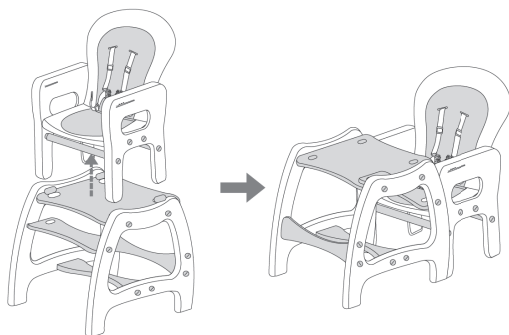

9

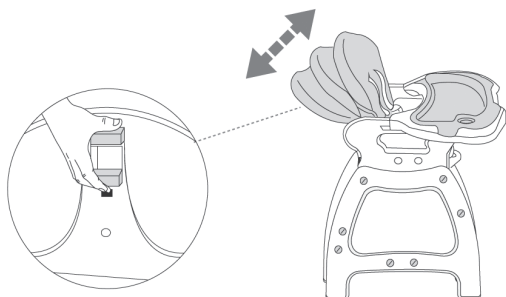

WAŻNE! ZACHOWAĆ W CELU POWOŁANIA SIĘ W PRZYSZŁOŚCI!

LISTA CZĘŚCI

A	Oparcie krzeselka	H	Poprzeczki łączące (x2)
B	Podstawa (siedzenie) krzeselka	I	Sworznie łączące (x2)
C	Bok krzeselka (prawy i lewy)	J	Podnózek
D	Poprzeczka (x2)	K	Dolna tacka
E	Blat	L	Blokada
F	Nogi (prawe i lewe)	M	Plastikowe nakrętki i śruby
G	Górna tacka		

MONTAŻ

KROK 1 Przykręć do lewej części stołu blat (**E**), dwie poprzeczki (**D**) i podnózek (**J**). Dokręć mocno plastikowymi nakrętkami (**M**) tak jak na rysunku, tak samo dokręć prawą nogę.

KROK 2 Ustaw oparcie krzesła z podstawą tak aby połączyć sworzniem łączącym (**I**)

KROK 3 Przykręć dwie poprzeczki łączące (**H**) do lewego boku krzeselka (**C**)
Umieść skręcone siedzisko i połącz mocno nakrętkami (**M**) jak na rysunku, zamontuj tak samo prawą nogę.

KROK 4 Włóż krzesło na cztery otwory stolika, jak pokazano na obrazku

KROK 5 Przeciągnij klamkę pasów bezpieczeństwa nad siedzisko krzeselka i boczne klamry zepnij z tym pasem.

KROK 6 Włóż górną tackę (**G**) w dolną (**K**) i zabezpieczając blokadą (**L**). Dopasuj dwa otwory regulacji tacy do rowków podłokietnika z krzesła.

Montaż regulowany tacki na podłokietnik

KROK 7 Tacka ma trzy-stopniową regulację. Zwolnij przycisk po obu stronach tacki oraz wysuń z podłokietników aż przycisk zatrzaskuje się w rowku podłokietnika.

Rozdzielenie krzesła i biurka

KROK 8 Podnieś krzesło do góry i postaw przed blatem

Regulacja siedziska

KROK 9 Trzy pozycje regulacja siedziska. Kąt pochylenia oparcia można regulować przy zaciśnięciu na tylnym oparciu siedziska przycisku regulacji.



OSTRZEŻENIA

- 1) Nadaje się dla dzieci do maksymalnej wagi 18 kg, które samodzielnie siedzą.
- 2) Krzeselko można rozłożyć na krzesło i stolik, dla dzieci od 3 lat
- 3) Krzeselko składać może tylko i wyłącznie osoba dorosła.
- 4) Krzeselka nie należy używać dopóki dziecko nie potrafi samodzielnie siedzieć.
- 5) Nie używaj w niebezpiecznych miejscach (schody, ogień, basen).
- 6) Nie pozostawiać dziecka bez opieki.
- 7) Nie używać tego wysokiego krzeselka, zanim wszystkie jego części nie zostaną prawidłowo dopasowane i wyregulowane.
- 8) Wyrobu wolno używać tylko zgodnie z niniejszą instrukcją.
- 9) Należy upewnić się, czy uprząż jest prawidłowo dopasowana.
- 10) Nie używaj krzeselka niekompletnego lub uszkodzonego.
- 11) Nakrętki należy dokręcać z umiarkowaną siłą aby nie zerwać gwintu na śrubach.
- 12) Ustawienie wysokiego krzeselka w bezpośredniej bliskości otwartego płomienia i innych źródeł silnego ciepła, takich jak grzejniki elektryczne, grzejniki gazowe itp. – Grozi niebezpieczeństwem!
- 13) Nie wolno zbyt mocno dociskać tacki do dziecka, należy pozostawić przestrzeń tną swobodne oddychanie.
- 14) Nie wolno pozwalać dziecku na wstawanie w krzeselku.
- 15) Dziecko powinno być zabezpieczone w krzeselku za pomocą pasów bezpieczeństwa

CZYSZCZENIE

Czyścić miękką, wilgotną ściereczką z dodatkiem łagodnych środków czyszczących. Nie używać chloru, nie prać w pralce, nie prasować, nie suszyć mechanicznie. Nie wystawiaj tapicerki na zbyt długie, bezpośrednie działanie promieni słonecznych może spowodować utratę koloru

IMPORTANT! READ CAREFULLY PLEASE KEEP FOR FUTURE REFERENCE!

PARTS LIST

A	Seat Backrest	H	Chair link bars (x2)
B	Chair Base	I	Connecting Pin (x2)
C	Right and Left Chair Arm	J	Footrest
D	Table link bars (x2)	K	Tray
E	Table Base	L	Safety Fixed Block
F	Right and left Leg	M	Plastic Nuts + Screws Driver
G	Top Tray		

ASSEMBLING PROCEDURES

STEP 1 insert table base, fixable bar into matching holes of left leg. Tight plastic nuts at relevant holes as the way shown, tight firmly until the same with right leg. Please be aware of all the projections of table base and fixable bar should match the holes in right and left leg. Fix plastic nuts tightly.

STEP 2 Align the seat back to connect with the chair base, insert the connecting pin.

STEP 3 Insert footrest and chair base into matching holes of left chair arm. Tight plastic nuts at relevant holes as the way shown, tight firmly until the same with right chair arm. Please be aware of all the projections of chair base and foot rest should match the holes in right and left chair arm. Fix plastic nuts tightly.

STEP 4 Insert the chair into four holes of table. Finished as picture shown.

STEP 5 Pull strap buckle on chair base out of the seat cushion; Snap all the safety buckles into strap buckle on chair base.

STEP 6 Insert safety fixed block into the back side of adjustable meal tray. Snap washable top tray onto the sides of the adjustable meal tray. Align two slots of adjustable meal tray to the grooves of the armrests of chair. Installation complete.

How to Assembling Adjustable Meal Tray

STEP 7 The adjustable meal tray has a three-position adjustment. Release buttons on each side underneath the adjustable meal tray. Slide the tray onto the armrests. Adjust until the release buttons snap into innermost grooves of the armrest.

How to Separate the Chair and Desk

- STEP 8** Take out the chair. Put the table in front position.

How to Adjust Seat Back

- STEP 9** Three-position adjustment seat back. The seat back angle can be adjusted while pulling up the seatback adjustment button.



WARNINGS

- 1) Scope of application: It is suitable for children up to the maximum weight 18 kg, which are able to sit alone.
- 2) Chair can be broken down into a chair and table, for children from 3 years.
- 3) Adult assembly required.
- 4) Do not use the highchair until you baby can not sit alone
- 5) Never use near stair, fire, swimming pools or any other areas that are not safe.
- 6) Do not leave child unattended
- 7) Not to use the highchair until all its parts are not properly aligned and adjusted
- 8) Use this product only as described in the instructions.
- 9) You should make sure the harness is properly adjusted
- 10) Do not use the convertible high chair if any of the parts are missing or broken.
- 11) Only use the spare pieces that are supplied by the retailer.
- 12) Be aware of risks related to open fire and other sources of strong heat radiation such as electric or gas radiators etc. placed in the vicinity of chair.
- 13) Do not press the tray to closely to the child's body. Leave enough space for the child for breathe.
- 14) Do not allow the child to stand up in the high chair.
- 15) Child shall be protected inside the high chair using belts (safety harness)

CLEANING

Wash the upholstery with wet cloth with soap or other mild washing agent. Never wash the upholstery in washing machine no whirl and tumble dry! Do not iron the upholstery parts! Do not dry clean! Never apply bleaching agents! Exposing the upholstery to direct sunlight for long period of time, may cause discoloration of the material.

Milly Mally

Milly Mally s.c
Marcin Napert,
Paweł Soszyński

Łukówiec 98
05-480 Karczew
Poland

00 48 (22) 394 09 94
info@millymally.pl
www.millymally.pl



www.millymally.pl