

Milly Mally

**INSTRUKCJA
OBSŁUGI**







**OPERATIONAL
MANUAL**






KRZESEŁKO / HIGH CHAIR MINI

WYPRODUKOWANO ZGODNIE Z NORMĄ PN-EN 14988

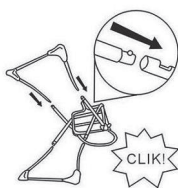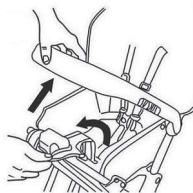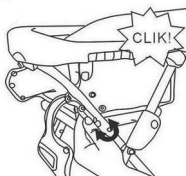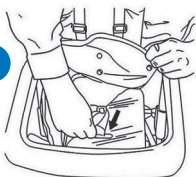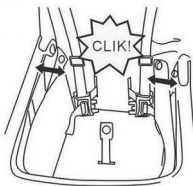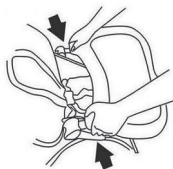

A**B****C****D**

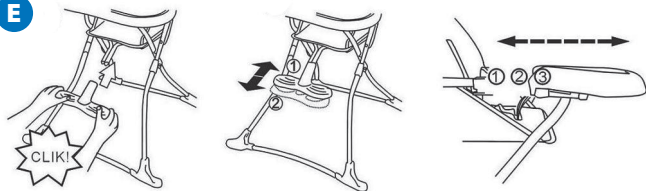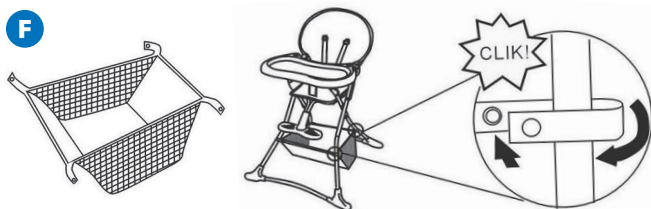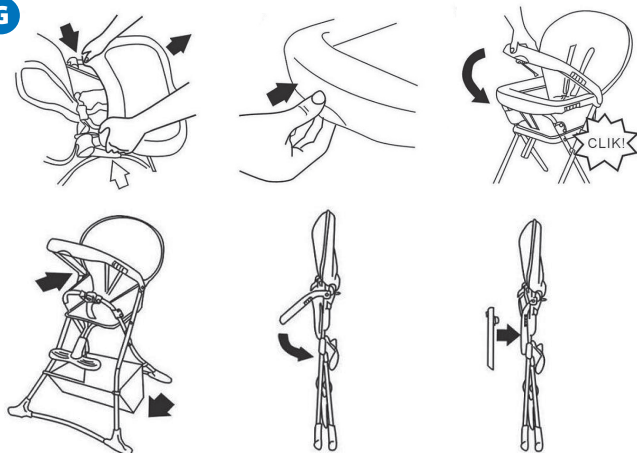E**F****G**

WAŻNE! ZACHOWAĆ W CELU POWOŁANIA SIĘ W PRZYSZŁOŚCI!

OSTRZEŻENIA

Nieprzestrzeganie poniższych ostrzeżeń może wywołać poważne uszkodzenia ciała dziecka

1. Nie pozostawiaj dziecka bez opieki.
2. Należy upewnić się, czy uprząż jest prawidłowo dopasowana.
3. Nie używać tego wysokiego krzeselka, zanim wszystkie jego części nie zostaną prawidłowo dopasowane i wyregulowane.
4. Ustawienie wysokiego krzeselka w bezpośredniej bliskości otwartego płomienia i innych źródeł silnego ciepła, takich jak grzejniki elektryczne, grzejniki gazowe itp. – Grozi niebezpieczeństwem!

INFORMACJE DODATKOWE

1. Nie używaj krzeselka dopóki dziecko nie potrafi samodzielnie siedzieć.
2. Nie należy używać wysokiego krzeselka, jeżeli jakkolwiek jego część jest złamana, oderwana lub jej brakuje.
3. Nie wolno zbyt mocno dociskać tacki do dziecka, należy pozostawić przestrzeń na swobodne oddychanie.
4. Nie wolno pozwalać dziecku na wstawanie w krzeselku.
5. Dziecko powinno być zabezpieczone w krzeselku za pomocą pasów bezpieczeństwa.
6. Nie używaj w niebezpiecznych miejscach (schody, ogień, basen)
7. Krzeselko dla dzieci w wieku od 6 miesięcy do 3 lat.

MONTAŻ

KRZESIELKO SKŁADAĆ MOŻE TYLKO I WYŁĄCZNIE OSOBA DOROSŁA.

- | | |
|--|-------------------------------|
| A Mocowanie oparcia i nóg krzeselka | E Mocowanie podnóżka |
| B Mocowanie siedziska | F Mocowanie koszyka |
| C Mocowanie siedziska | (tylko w niektórych modelach) |
| D Montaż tacki | G Składanie krzeselka |

KONSERWACJA I CZYSZCZENIE

Przed użyciem należy upewnić się, że krzeselko jest rozłożone prawidłowo, zgodnie z instrukcją. Nakrętki należy dokręcać z umiarkowaną siłą aby nie zerwać gwintu na śrubach. Nie używać tego wysokiego krzeselka, zanim wszystkie jego części nie zostaną prawidłowo dopasowane i wyregulowane. Regularnie sprawdzaj stan techniczny produktu. Czyścić miękką, wilgotną ściereczką z dodatkiem łagodnych środków czyszczących. Nie używać chloru, nie prać w pralce, nie prasować, nie suszyć mechanicznie. Nie wystawiaj tapicerki na zbyt długie, bezpośrednie działanie promieni słonecznych może spowodować utratę koloru.

IMPORTANT! READ CAREFULLY PLEASE KEEP FOR FUTURE REFERENCE!

WARNINGS!

Failure to follow these warnings could cause serious injury to the child.

1. Do not leave child unattended
2. Make sure that the harness is properly adjusted.
3. Not to use the highchair until all its parts are not properly aligned and adjusted.
4. Be aware of risks related to open fire and other sources of strong heat radiation such as electric or gas radiators etc. placed in the vicinity of chair.

ADDITIONAL INFORMATION

1. Do not use the high chair until you baby can not sit alone.
2. Do not use the high chair if any of the parts are missing or broken.
3. Do not press the tray too closely to the child's body. Leave enough space for the child for breathe.
4. Do not allow the child to stand up in the high chair.
5. Child shall be protected inside the high chair using belts (safety harness)
6. Never use near stair, fire, swimming pools or any other areas that are not safe.
7. High Chair for children aged from 6 months to 3 years.

ASSEMBLING PROCEDURES

THE PRODUCT SHOULD BE ASSEMBLED BY ADULTS ONLY

- | | |
|--|-----------------------------|
| A Attaching Back Support and Legs | E Attaching Footrest |
| B Attaching seat pad | F Attaching Basket |
| C Attaching seat pad | (certain models only) |
| D Attaching Tray | G Folding Highchair |

MAINTENANCE AND CLEANING

Before using the high chair, make sure that it is properly unfolded and assembled according to the manual. The nuts should be tightened with moderate force so as not to damage the threads on the screws. Periodically check technical condition of your product. Wash the upholstery with wet cloth with soap or other mild washing agent. Never wash the upholstery in washing machine no whirl and tumble dry! Do not iron the upholstery parts! Do not dry clean! Never apply bleaching agents! Exposing the upholstery to direct sunlight for long period of time, may cause discoloration of the material.



Milly Mally

Milly Mally s.c
Marcin Napert,
Paweł Soszyński

Łukówiec 98
05-480 Karczew
Poland

00 48 (22) 394 09 94
info@millymally.pl
www.millymally.pl



www.millymally.pl